



# Support Plate Assembly

**TABLE 2**  
Components of Support Plate Assemblies

Item No.	Description	Assembly Part Number →			
		Part Number	Quantity	Part Number	Quantity
8	Solenoid lever and pinion assembly	5-66-7321-00	1	5-42-2077-48-42	1
11	Pressure spring (red)	9-70-5801-00	1	5-42-2077-57-42	1
12	Solenoid assembly	5-12-5529-02	1	5-42-2077-41-42	1
13	Solenoid link	5-55-2006-00	1	1	1
13C	Cap screw (solenoid link)	8-157-703-00	1	1	1
13N	Nut (solenoid link)	9-40-3732-00	1	1	1
17	Lever arm assembly	5-17-2001-02	1	1	1
17B	Pressure button	9-25-1908-00	2	2	2
17E	Eccentric sleeve (lever arm)	8-054-201-00	1	1	1
17S	Set screw (lever arm)	9-22-1004-00	2	2	2
19	Pressure spring nut	8-019-202-01	1	1	1
22	Solenoid lever stop	8-022-603-00	1	1	1
28	Solenoid lever (component of Item 8)				
32	Pinion (component of Item 8)				
32R	Retaining ring (component of Item 8)				
53	Manual release spring tube	8-053-201-00	1	1	1
53P	Roll pin (spring tube)	9-32-4012-00	1	1	1
76	Wrap spring stop	8-076-203-00	1	1	1
76A	Holding plate (wrap spring stop)	8-076-204-00	1	1	1
76S	Cap screw (spring stop)	9-17-2812-00	2	2	2
76W	Lock washer (spring stop)	9-45-0328-00	2	2	2
126	Support plate and bearing assembly	5-26-2004-08	1	1	1
130	Pivot pin (lever arm)	8-118-204-00	1	1	1
131	Pivot pin (solenoid lever)	8-131-201-00	1	1	1
131R	Retaining ring (pivot pin)	9-03-0020-00	5	5	5
132	Cap screw (solenoid mounting)	8-350-008-00	4	4	4
132H	Holding plate (solenoid mounting)	8-076-207-00	2	2	2
132L	Lock plate (solenoid mounting)	8-076-206-00	2	2	2
134	Pressure spring spacer - 7/8" long	8-134-001-02	1	1	1
	Pressure spring spacer - 1-1/8" long	8-134-001-04			
	Pressure spring spacer - 1-1/4" long	8-134-001-05			
	Pressure spring spacer - 1" long	8-134-001-03			
	Pressure spring spacer - 1-3/8" long	8-134-001-06			
138	Bearing (washer type)	8-138-201-00	8	8	8
138A	Bearing (washer type)	8-138-701-00	2	2	2
146	Release rod	8-146-201-01	1	1	1
146B	Ball bearing (release rod)	9-01-6801-00	1	1	1
146R	Retaining ring (release rod)	9-03-0007-00	1	1	1
152	Pressure spring stud	8-152-201-00	1	1	1
152P	Pivot pin (spring stud)	8-118-202-00	1	1	1
152R	Retaining ring (spring stud)	9-03-0019-00	2	2	2
159	Interlock switch kit	5-57-5531-01	1	1	1
	Microswitch (component of kit 5-57-5531-01)	9-62-8205-00	1	1	1
	Interlock spacer	8-170-233-02	1	1	1
178	Instruction plate	8-078-055-00	1	1	1
178S	Drivescrew	9-25-1303-00	2	2	2
179	Solenoid mounting plate	8-179-205-01	1	1	1
179G	Grommet (mounting plate)	8-147-202-00	3	3	3
179S	Shoulder screw (mounting plate)	9-26-1108-00	3	3	3
179W	Washer (mounting plate)	8-138-202-00	3	3	3
170	Manual release plate	8-170-102-00	1	1	1
170S	Release plate screw	9-16-3014-01	2	2	2
170N	Release plate nut	9-40-3730-00	2	2	2

**TABLE 3 - Contents of Assemblies and Kits**

Item No.	Description
12	Solenoid Assembly 1 - Plunger 1 - Frame 2 - Lock Plates 1 - Solenoid Link Cap Screw 1 - Solenoid Link Nut
12A	Coil Assembly 1 - Coil 2 - Plunger Guides 2 - Plunger Guide Screws
158	Proximity Sensor Kit (5-57-5538-01) 1 - Proximity Switch 1 - Switch Bracket 1 - Sensor Bracket 1 - Mounting Hardware
159	Brake Switch Kit (5-57-5531-01) (brake release interlock switch) 1 - Microswitch 1 - Bracket, Microswitch 1 - Actuator Rod/Lever Arm 1 - Mounting Hardware 1 - Actuator Assembly
7R	Full Release Kit (5-55-2007-01) 1 - Release Lever 1 - Spring Pin 1 - O-Ring 1 - Release Handle 1 - Locking Plate 1 - Assembly Hardware
Not Shown	Space Heater Kit 1 - Space Heater 1 - Heater Clamp 1 - Clamp Screw

