
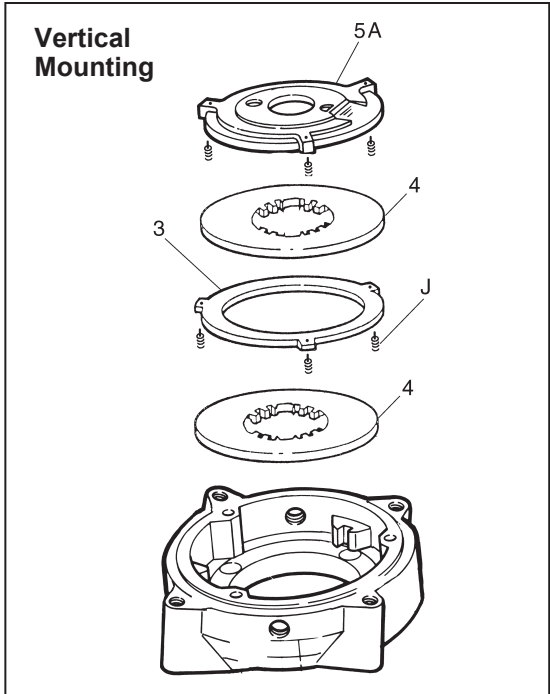


Parts List for 87,700 Series Brakes (rev. D)

Information required when ordering replacement parts:

- Give part number of parts or kits needed, brake model number, and brake serial number. The brake model and serial number may identify special brakes not covered by this parts list.
 - Description items in ***CAPITALIZED BOLD ITALICS*** are recommended spare parts. One set per 5 brakes in service is recommended.
 - Enclosures are designated as follows:
UL Type 1, IP 23 (formerly referred to as standard)
UL Type 1, IP 56 (formerly referred to as DTWP dust-tight waterproof)
 - Housing and manual release assembly (Item B) includes manual release kit (Item BA).
- For installation and service instructions, see Sheet 8-078-927-07. Detailed service instruction sheet is included with each kit.

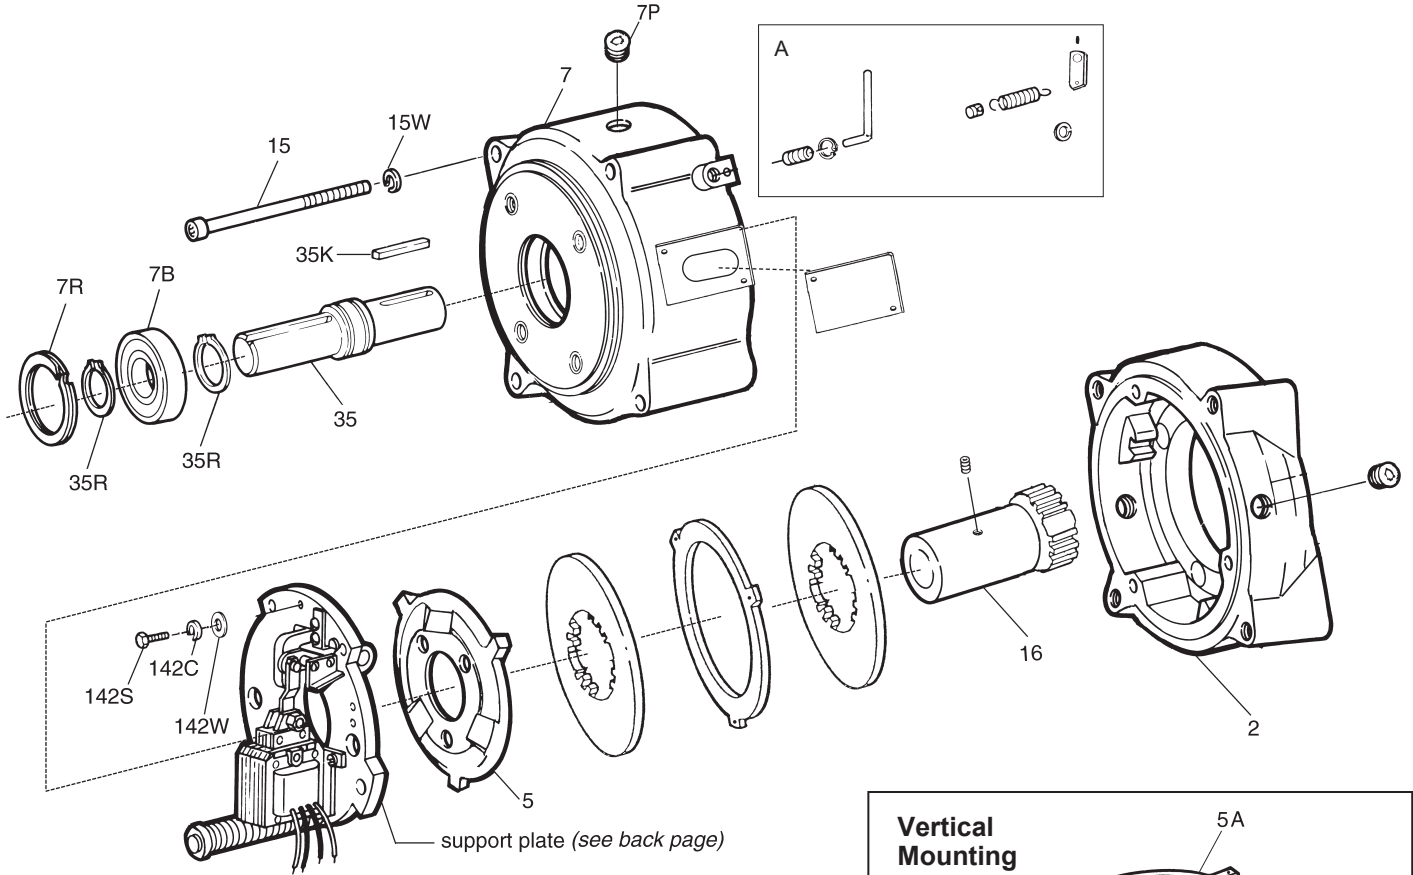

<small>www.stearnsbrakes.com</small> <small>SEE INSTALLATION AND SERVICE SHEET OR INSTALLATION LABEL INSIDE OF HOUSING BEFORE INSTALLING, OPERATING, OR SERVICING BRAKE</small>			
SERIAL NUMBER:		← LB-FT	
MODEL NUMBER:		←	
TORQUE:		←	
ENCLOSURE RATING:			
HZ	VOLTS	INRUSH/HOLDING AMPS	VOLTS INRUSH/HOLDING AMPS
MOUNTING:		Rexnord Industries, LLC	
IP RATING:		Stearns Division	
CUST P/N:		Cudahy, WI 53110	

Note:
MODEL NUMBER
 will appear on brake
 nameplate.

REVISION CONTROL
 (if applicable) and
 brake serial number

TABLE 1 Components of AC Brake			Brake Model Number→		1-087-7XX-01* 1-1/8" Shaft						1-087-7XX-03* 1-3/8" Shaft						1-087-7XX-05* 1-5/8" Shaft						
			Torque (lb-ft)→		6 thru 35		50 and 75		105		6 thru 35		50 and 75		105		6 thru 35		50 and 75		105		
			Enclosure Type→		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Item	Description		IP Rating→ Part Number ↓		23	56	23	56	23	56	23	56	23	56	23	56	23	56	23	56	23	56	
7R	Retaining ring (housing)		9-03-0126-00		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
35R	Retaining ring (shaft)		9-03-0133-00		2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	
7B	Ball bearing		9-01-0509-00		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
35	Brake shaft Brake shaft Brake shaft		8-035-800-00 8-035-710-00 8-035-711-00		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
35K	Key Key Key		9-50-1030-00 9-50-1230-00 9-50-1428-00		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
7	Housing and manual release assembly	Including item 7P	5-07-7034-00		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
7P	Access plug		9-33-0114-00		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
A	Manual release kit		5-55-7002-00		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
15	Housing cap screw		9-16-3486-00		4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	
15W	Lock washer spring medium 1/2		9-45-0334-00		4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	
not shown	Pipe plug (drain)		9-33-0325-00			1		1		1		1		1		1		1		1		1	
5	PRESSURE PLATE		8-005-708-01		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
4	FRICION DISC KIT - SPLINED		5-66-8483-00		1	1	2	2	3	3	1	1	2	2	3	3	1	1	2	2	3	3	
3	STATIONARY DISC KIT		5-66-8372-00		0	0	1	1	2	2	0	0	1	1	2	2	0	0	1	1	2	2	
16	Hub and set screw assembly Hub and set screw assembly Hub and set screw assembly Hub and set screw assembly Hub and set screw assembly Hub and set screw assembly Hub and set screw assembly Hub and set screw assembly Hub and set screw assembly		5-16-7210-00-01E 5-16-7210-00-01G 5-16-7210-00-01H 5-16-7211-00-01E 5-16-7211-00-01G 5-16-7211-00-01H 5-16-7212-00-01E 5-16-7212-00-01G 5-16-7212-00-01H		1	1					1	1					1	1					
2	Endplate Endplate Endplate		8-002-788-22 8-002-789-22 8-002-790-22		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
142S	Machine screw 1/4 - 20 x 7/8" hex head		9-16-3014-01		3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	
142C	Conical spring washer, 1/4		9-46-0006-00		3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	
142W	Flat washer 1/4 I.D. x 9/16 O.D.		9-46-0005-00		3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	
not shown	"O" ring gasket (housing-to-endplate)		8-073-002-04			1		1		1		1		1		1		1		1		1	
not shown	"O" ring gasket (each end of brake)		8-073-002-03			2		2		2		2		2		2		2		2		2	
2P	Pipe plug (external lead holes)		9-33-0914-00		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
Vertical Modification - for stationary disc(s) see Item 3 Table 1																							
5A	PRESSURE PLATE		8-005-708-12		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
J	VERTICAL SPRING KIT (STANDARD) VERTICAL SPRING KIT (BRASS)		5-66-3176-00 5-66-3177-00		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	

* "X" in brake model number denotes variables in torque rating, enclosure and current. i.e. 1-087-7XX-01



TABLE 2
Components of Support Plate and Coil Assembly

Item	Description	Part Number	Torque (lb-ft)				
			6 10	15	25 50	35 75 105	
126	Support plate and bearing assembly	5-26-7006-00	1	1	1	1	
22	Solenoid lever stop	8-022-203-00	1	1	1	1	
76	Wrap spring stop	8-076-703-00	1	1	1	1	
76S	Screw (wrap spring stop) 10-24 x 1/2	9-25-7331-00	2	2	2	2	
79P	Spacer (solenoid)	8-179-705-00	1	1	1	0	
8	SOLENOID LEVER AND PINION KIT	5-66-7371-00	1	1	1	1	
170	Release plate	8-170-706-00	1	1	1	1	
170N	Nut (release plate) 1/4 x 20	9-40-3730-00	2	2	2	2	
170S	Cap screw (release plate)	9-15-1031-00	2	2	2	2	
171	Spacer (release plate)	8-141-707-00	2	2	2	2	
17	Lever arm assembly	5-17-7005-00	1	1	1	1	
130	Pivot pin (lever arm)	9-32-3111-00	1	1	1	1	
152P	Pivot pin (spring tube)	9-32-4059-00	1	1	1	1	
130B	Bearing (washer type)	8-138-701-00	2	2	2	2	
19 & 152	Pressure spring tube kit	5-66-7471-00	1	1	1	1	
11	Pressure spring kit – black	5-66-3072-00	1				
	Pressure spring kit – white	5-66-3074-00		1			
	Pressure spring kit – orange	5-66-3076-00			1		
	Pressure spring kit – purple	5-66-3078-00				1	
AC Brakes							
U	NO. 5 AC SOLENOID KIT	5-66-5052-00	1				
	NO. 6 AC SOLENOID KIT	5-66-5062-00		1	1		
	NO. 8 AC SOLENOID KIT	5-66-5081-00				1	
13B	Solenoid link	8-013-708-00	1	1	1		
	Solenoid link	8-013-709-00				1	
V	SIZE 5 STRENGTH 3 COIL KIT 60 HZ	115/230 Vac	5-96-6509-25	1			
		230/460 Vac	5-96-6509-27	1			
		115 Vac	5-96-6509-20	1			
		230 Vac	5-96-6509-24	1			
		460 Vac	5-96-6509-26	1			
	SIZE 6 STRENGTH 3 COIL KIT 60 HZ	115/230 Vac	5-96-6609-38		1	1	
		230/460 Vac	5-96-6609-49		1	1	
		115 Vac	5-96-6609-30		1	1	
		230 Vac	5-96-6609-37		1	1	
		460 Vac	5-96-6609-47		1	1	
	SIZE 8 STRENGTH 3 COIL KIT 60 HZ	115/230 Vac	5-96-6809-59				1
		230/460 Vac	5-96-6809-69				1
		115 Vac	5-96-6809-52				1
		230 Vac	5-96-6809-58				1
		460 Vac	5-96-6809-67				1
	575 Vac	5-96-6809-72				1	
XX**	Brake release interlock switch	5-57-5517-00	1	1	1	1	

**AC brakes with the brake release interlock (N.O.) switch Item XX use Item W solenoid assembly for switch mounting in place of Item U.

TABLE 3
Contents of Kits and Assemblies (contents may vary)


Letter Designation	Kit Description
4	Friction disc kit – splined (5-66-8483-00) 1 – Friction disc
3	Stationary disc kit (5-66-8372-00) 1 – Stationary disc
J	Vertical above spring and spacer kit (5-66-3171-00) 9 – Vertical above mounting springs 9 – Vertical above spring spacers
8	Solenoid lever and pinion kit (5-66-7371-00) 1 – Solenoid lever and pinion assembly 1 – Cotter pin 1 – Solenoid lever pivot pin 1 – Pivot pin retaining ring
19 & 152	Pressure spring tube kit (5-66-7471-00) 1 – Pressure spring tube 1 – Pressure spring screw 1 – Spring tube pivot pin
11	Pressure spring kit (5-66-307X-00) 1 – Pressure spring
U	AC solenoid kit (5-66-50XX-00) 1 – Plunger 1 – Frame 3 – Solenoid mounting screws 3 – Solenoid mounting conical spring washers 1 – Solenoid link nut 1 – Drive lock pin (for #8 solenoid only) (<i>not shown</i>) 1 – Washer (for #8 solenoid only) (<i>not shown</i>)
V	Coil kits (5-96-6X09-XX) AC coils 1 – Coil 2 – Plunger guides 2 – Plunger guide screws
XX	AC switch assembly (5-57-5504-00 or 5-57-5506-00) (brake release interlock switch – N.O.) 1 – AC switch 2 – Mounting screws 2 – Lock washers
Y	Arc suppression module (5-57-5711-00) 1 – Arc suppression module 1 – Cable strap
A	Manual release kit (5-55-7002-00) Spring anchor Roll pin Retaining ring Release spring Bearing Release lever Release arm "O" ring

TABLE 4
Complete support plate assembly*

	AC
6 lb-ft	5-42-7119-00-05
10 lb-ft	5-42-7121-00-05
15 lb-ft	5-42-7123-00-06
25/50 lb-ft	5-42-7125-00-06
35/75/105 lb-ft	5-42-7127-00-08

*All items shown in Table 2 except for coil kit.

Support Plate Assembly

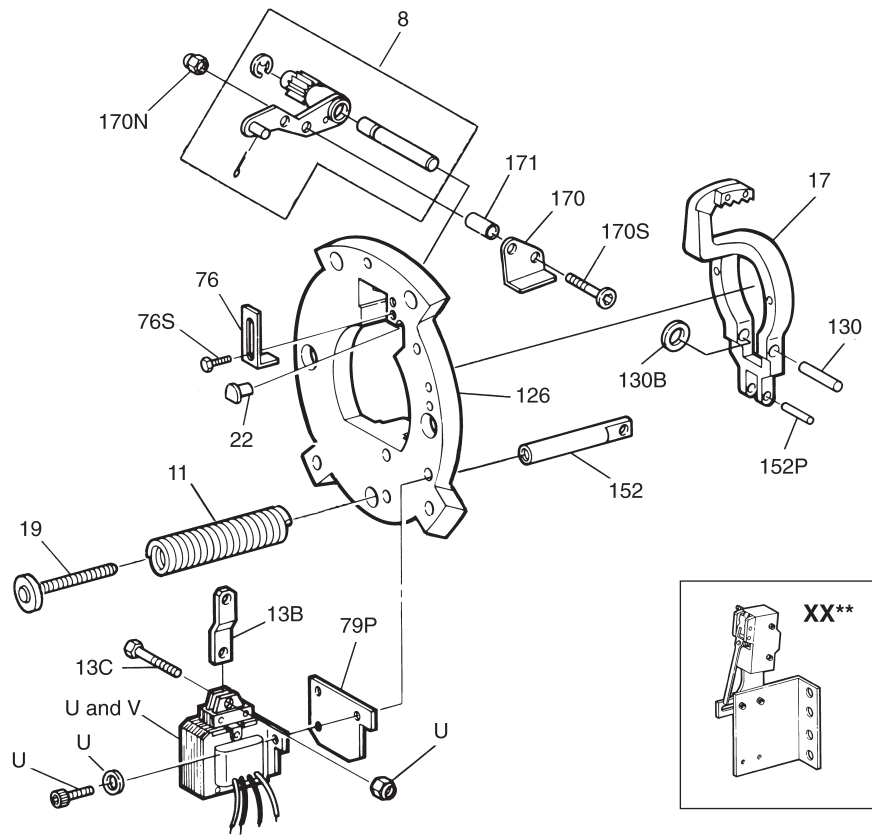

Solenoid and Coil

